

MO23ORAW
MO23ORAB

gorenje
BY
ora'ito

DEAR CUSTOMER

We sincerely thank you for your purchase. We believe you will soon find ample evidence that you can really rely on our products. To make the use of the appliance easier, we attach these comprehensive instruction manual.

The instructions should aid you in getting familiar with your new appliance. Please, read them carefully before using the appliance for the first time.

In any case, please make sure the appliance was supplied to you undamaged. Should you identify and transport damage, contact your sales representative or the regional warehouse from where the product was delivered. You will find the telephone number on the receipt or delivery report.

We wish you a lot of pleasure with your new household appliance.



The appliance for household use for heating food and beverages using electromagnetic energy, for indoor use only.

INSTRUCTIONS FOR USE

Carefully read the instructions and save them for future reference.

These instructions are intended for the user. They describe the cooker and how to use it. They also apply to different types of appliances, therefore you may find some descriptions of functions that may not apply to your appliance.

IMPORTANT SAFETY INSTRUCTIONS



Never touch the surfaces of heating or cooking appliances. They will become hot during operation. Keep children at a safe distance. There is a risk of burning!



Microwave energy & High voltage!
Do not remove the cover.

WARNING! The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised. Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.

- **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated; (Only for the model with grill function)

- **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person;
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy;
- **WARNING:** liquids and other foods must not be heated in sealed containers since they are liable to explode.
- Children should be supervised to ensure that they do not play with the appliance.
- Don't remove oven's feet, do not block air vents of the oven.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container;
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns;
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended;
- When cleaning surfaces of door, door seal, cavity of the oven, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth.

- The oven should be cleaned regularly and any food deposits removed;
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation;
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not let the cord hang over the edge of the table or worktop.
- Never connect this appliance to an external timer switch or remote control system in order to avoid a hazardous situation.
- Never replace the light bulb inside the oven. It must always be replaced by Gorenje service.
- Do not clean the appliance with steam cleaners, high-pressure cleaners, sharp objects, abrasive cleaning agents, and abrasive sponges and stain removers.

SAFETY INSTRUCTIONS FOR GENERAL USE

Listed below are, as with all appliances, certain rules to follow and safeguards to assure top performance from this oven:


1. Always have the glass tray, roller arms, coupling and roller track in place when operating the oven.
2. Do not use the oven for any reason other than food preparation, such as for drying clothes, paper, or any other nonfood items, or for sterilizing purposes.
3. Do not operate the oven when empty. This could damage the oven.
4. Do not use the oven cavity for any type of storage, such as papers, cookbooks, etc.
5. Do not cook any food surrounded by a membrane, such as egg yolks, potatoes, chicken livers, etc without first being pierced several times with a fork.
6. Do not insert any object into the openings on the outer case.
7. Do not at any time remove parts from the oven such as the feet, coupling, screws, etc.
8. Do not cook food directly on the glass tray. Place food in/on proper cooking utensil before placing in the oven.

IMPORTANT - COOKWARE NOT TO USE IN YOUR MICROWAVE OVEN


- Do not use metal pans or dishes with metal handles.
 - Do not use anything with metal trim.
 - Do not use paper covered wire twist-ties on plastic bags.
 - Do not use melamine dishes as they contain a material which will absorb microwave energy. This may cause the dishes to crack or char and will slow down the cooking speed.
 - Do not use Centura Tableware. The glaze is not suitable for microwave use. Corelle Livingware closed handle cups should not be used.
 - Do not cook in a container with a restricted opening, such as a pop bottle or sealed oil bottle, as they may explode if heated in a microwave oven.
 - Do not use conventional meat or candy thermometers.
 - There are the thermometers available specifically for microwave cooking. These may be used.
9. Microwave utensils should be used only in accordance with manufacturer's instructions.
 10. Do not attempt to deep-fry foods in this oven.

11. Please remember that a microwave oven only heats the liquid in a container rather than the container itself. Therefore, even though the lid of a container is not hot to the touch when removed from the oven, please remember that the food/liquid inside will be releasing the same amount of steam and/or spitting when the lid is removed as in conventional cooking.
12. Always test the temperature of cooked food yourself especially if you are heating or cooking food/liquid for babies. It is advisable never to consume food/liquid straight from the oven but allow it to stand for a few minutes and stir food/liquid to distribute heat evenly.
13. Food containing a mixture of fat and water, e.g. stock, should stand for 30-60 seconds in the oven after it has been turned off. This is to allow the mixture to settle and to prevent bubbling when a spoon is placed in the food/liquid or a stock cube is added.
14. When preparing/cooking food/liquid and remember that there are certain foods, e.g. Christmas puddings, jam and mincemeat, which heat up very quickly. When heating or cooking foods with a high fat or sugar content do not use plastic containers.
15. Cooking utensil may become hot because of heat transferred from the heated food. This is especially true if plastic wrap has been covering the top and handles of the utensil. Potholders may be needed to handle the utensil.
16. To reduce the risk of fire in the oven cavity:
 - a) Do not overcook food. Carefully attend microwave oven if paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b) Remove wire twist-ties from bags before placing bag in oven.
 - c) If materials inside the oven should ignite, keep oven door closed, turn the oven off at the wall switch, or shut off power at the fuse or circuit breaker panel.
17. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential environments;
 - bed and breakfast type environments.

CONTROL PANEL

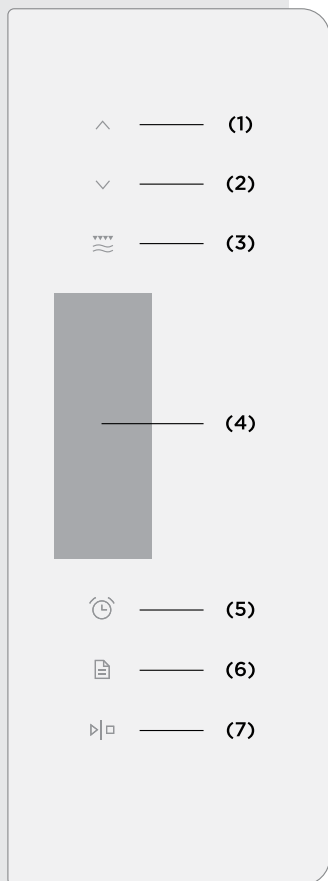

1. Up (+)
2. Down (-)
3. Heating function - MICRO/GRILL
4. Display Window
5. CLOCK/TIMER
6. AUTO MENU
7. START/RESET

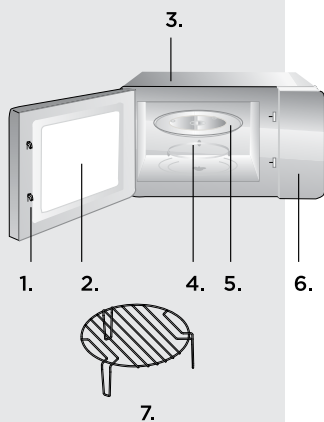

1. Door Safety Lock System
2. Oven Window
3. Oven Air Vent
4. Roller Ring
5. Glass Tray
6. Control Panel
7. Grill rack

INSTRUCTIONS FOR USE

1. QUICK START

Use this function to rapidly heat (100% microwave power) or cook your food. In the standby mode, press the START key and the oven will operate for 60 seconds.

Example: To heat a glass of milk

- a) Put a glass of milk onto the glass turntable and close the door.
- b) Press the button START/RESET, the microwave oven will work on 100% power for 1 minutes.
- c) You will hear 5 beeps when cooking is completed.

2. MICROWAVE HEATING

This function has two options.

a) Quick microwave heating (100% power)

Example: To heat food on 100% power for 5 minutes

1. Set time to »5:00«.
2. Press START/RESET.

b) Manual-operation microwave heating

Example: To heat food on 70% power for 10 minutes

1. Press MICRO/GRILL button, select »70%« power.
2. Set time to »10:00«.
3. Press START/RESET.

There are 5 power levels and the longest microwave cooking time is 60 minutes.

Touching times "MICRO/GRILL"	Microwave power	Display
1	100%	P100
2	70%	P70
3	50%	P50
4	30%	P30
5	10%	P10

3. AUTO DEFROST

The oven allows defrosting of meat, poultry, and seafood. Defrosting time and operating power will be adjusted automatically according to the preset weight. Weight of the food to be defrosted may be between 100 g and 2000 g.

Example: defrost 0.5 kg of frozen meat

- a) Press MICRO/GRILL to select »DEF«.
- b) Input weight by pressing UP and DOWN button.
- c) Press the START key to start the program.

4. GRILL

Grilling is especially suitable for thin slices of meat, escalopes or steaks, meat chops, skewers, sausages, or pieces of chicken. Grilling is also suitable for toasting bread or sandwiches and finishing dishes au gratin.

This function has two options. You may select between the two by pressing the MICRO/GRILL button (the longest cooking time is 60 minutes):

Option 1: 85% grill power, display G-1

Option 2: 50% grill power, display G-2

Example: Cooking food using the grill for 20 minutes

- a) Press MICRO/GRILL until display shows »G-1«.
- b) Set cooking time »20:00«.
- c) Press START/RESET.

NOTE: When grilling, food is not heated by microwaves. Heat is radiated from the metal heater at the top of the oven. When grill is working, the cooking time is divided into 2 stages. After the 1st stage, program will automatically pause and sound 2 beeps, indicating you to open the oven and turn over the food. Close the door after turning the food. Press START/RESET button and the cooking will continue for the 2nd stage. If you do not want to turn over the food, the oven will re-start automatically after 1 min pause.

5. COMBINATION COOKING

With this appliance you can select between two options of combination cooking.

Option 1: The oven will operate with microwaves 55 percent of the time, and with grill 45 percent of the time. This operating mode is suitable for cooking fish or dishes au gratin. Display will show »C-1«.

Option 2: The oven will operate with microwaves 30 percent of the time, and with grill 60 percent of the time. This operating mode is suitable for cooking pudding, souffles, omelettes, baked potatoes, and poultry. Display will show »C-2«.

Example: Cooking food using option 2 for 15 minutes

- a) Press MICRO/GRILL until display shows »C-2«.
- b) Set cooking time to »15:00«.
- c) Press START/RESET.

6. AUTO-MENU

For the food in the auto menu, only the type of food and the weight/amount have to be set. The oven will aid you in the setting of power and time.

Example: Auto cooking 0.4 kg fish

- a) Press AUTO MENU button until »A-5« displayed.
- b) Input the weight by pressing the button UP and DOWN.
- c) Press START/RESET.

Menu	Weight/ amount	Microwave power	
A-1 Rice	100 - 500g	16 - 23min	80%
A-2 Vegetable	100 - 600g	2 - 7min 30sec	100%
A-3 Noodles	1 - 2	4min 30sec - 7min 40sec	100%
A-4 Meat	200 - 1000g	7 - 19min	80%
A-5 Fish	200 - 1000g	4 - 12min	80%
A-6 Chicken	200 - 1000g	14min 30sec - 34min	55%
A-7 Liquid	2 - 10dl	2 - 5min	100%
A-8 Popcorn	100g	3min 30sec	100%

7. CLOCK

The oven is fitted with a digital clock. When the oven is in the standby mode, the clock can be set in the 24-hour mode by pressing the CLOCK key.

Example: To set the time to 8:30

- a) Press the CLOCK/TIMER button. Display will start flashing, adjust the hour with UP and DOWN buttons.
- b) Press CLOCK/TIMER again, adjust the minutes with buttons UP and DOWN.
- c) Press CLOCK/TIMER again and the clock will be set.
- d) If you want to change the time, repeat the procedure above.

8. DELAY START

This allows you to set the microwave oven to start and finish cooking at pre-set time.

The clock must be set before you use this feature.

Example: The current time is 16:30 and you want to start cooking at 18:15 on 70% power for 10 minutes

- a) Press CLOCK/TIMER, set the time to »18:15« by pressing UP and DOWN buttons.
- b) Press MICRO/GRILL to select 70% power.
- c) Set cooking time to 10 minutes.
- d) Press START/RESET

NOTE: If you do not set the power and cooking time and directly press the start button once you have programmed the time, the appliance will only work as a clock. At 18:15 there will be 10 beeps and the appliance will switch off.

9. CHILD LOCK

This function is used to prevent unsupervised operation of the oven by little children. The CHILD LOCK indicator will show up on display screen, and the oven can not be operated while the CHILD LOCK is set.



To set the CHILD LOCK: In standby mode of the oven, press button START | PAUSE and hold the button for 3 seconds, a beep sounds and lock indicator lights.

To cancel the CHILD LOCK: Press and hold the button START | PAUSE for 3 seconds until lock indicator on display turns off.

10. START/RESET

- a) In the course of operation, pressing START/RESET button will stop operation.
- b) If any program was set before pressing start, pressing this button will cancel any set program.

11. ECO MODE - POWER SAVING

Press the  and  keys simultaneously. The display will turn off and the microwave is in Eco mode which minimizes power usage.

To cancel the Eco mode and turn on the display again, press any other button or open or close the door.

CARE OF YOUR MICROWAVE OVEN

1. Turn the oven off and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters of spilled liquids adhere to oven walls, wipe with a damp cloth. The use of harsh detergent or abrasives is not recommended.
3. The outside oven surface should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Do not allow the Control Panel to become wet. Clean with a soft, damp cloth. Do not use detergents, abrasives or spray-on cleaners on the control Panel.
5. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates malfunction of the unit.
6. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
7. The roller ring and oven cavity floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent, water or window cleaner and dry. The roller ring may be washed in mild sudsy water or dishwasher. Cooking vapours collect during repeated use but in no way affect the bottom surface or roller ring wheels. When removing the roller ring from cavity floor for cleaning, be sure to replace it in the proper position.
8. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwavable bowl. Microwave for 5 minutes, wipe thoroughly and dry with a soft cloth.

ENVIRONMENT

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

MOUNTING THE MICROWAVE OVEN

INSTALLATION

1. Make sure all the packing materials are removed from the inside of the door.
2. Inspect the oven after unpacking for any visual damage such as:
 - Misaligned Door
 - Damaged Door
 - Dents or Holes in Door Window and Screen
 - Dents in Cavity

If any of the above are visible, DO NOT use the oven.

3. This Microwave Oven weighs 14,5 kg and must be placed on a horizontal surface strong enough to support this weight.
4. The oven must be placed away from high temperature and steam.
5. DO NOT place anything on top of the oven.
6. Keep the oven at least 20 cm away from both sidewalls and 30 cm away from rear wall to ensure the correct ventilation. Microwave oven should not be placed in a cabinet.
7. DO NOT remove the turn -table drive shaft.
8. As with any appliance, close supervision is necessary when used by children.
9. Make sure that the AC outlet is easily accessible so that the plug can be removed quickly in an emergency. Otherwise, it should be possible to disconnect the device using a switch from the circuit. In this case, the existing provisions of the electrical safety standards are considered.

The product has to be correctly installed on earthed socket with a single-phase AC (230 V/50 Hz).

WARNING! THIS APPLIANCE MUST BE EARTHED!

10. This oven requires 1.4 KVA for its input consultation with service engineer is suggested when installing the oven.

CAUTION: This oven is protected internally by a 250V, 10 Amp Fuse.

SPECIFICATIONS


Power consumption.....	220-240V-50Hz, 1400W
Output power.....	900W
Grill heater.....	1200W
Operating Frequency.....	2450MHz
Outside Dimensions....	510mm(W) x 303mm(H) x 425mm(D)
Oven Capacity.....	23 litres
Uncrated Weight.....	Approx. 14,5 kg
Noise level.....	Lc < 58 dB (A)



This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).

This guideline is the frame of a European-wide validity of return and recycling on Waste Electrical and Electronic Equipment.

MOUNTING DIMENSIONS

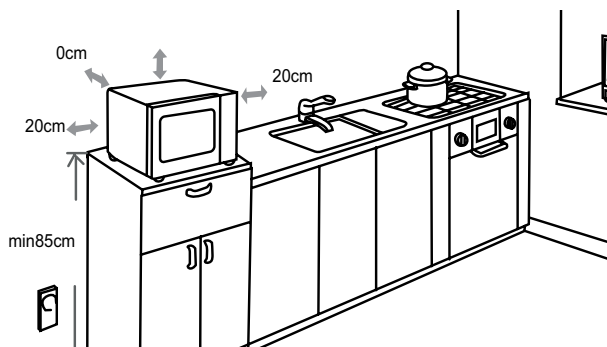

RADIO INTERFERENCE

Microwave oven may cause interference to your radio, TV, or similar equipment. When interference occurs, it may be eliminated or reduced by the following procedures.

- Clean the door and sealing surface of the oven.
- Place the radio, TV, etc. as far away from your microwave oven as possible.
- Use a properly installed antenna for your radio, TV, etc. to get a strong signal reception.

WE RESERVE THE RIGHT TO MAKE ANY CHANGES THAT DO NOT AFFECT THE FUNCTIONALITY OF THE APPLIANCE.

BEFORE YOU CALL FOR SERVICE

1. If the oven will not perform at all, the information on the display does not appear or the display disappeared:
 - a) Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
 - b) Check the premises for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
2. If the microwave power will not function:
 - a) Check to see whether the timer is set.
 - b) Check to make sure that the door is securely closed to engage the safety interlocks. Otherwise, the microwave energy will not flow into the oven.
If none of the above rectify the situation, then contact the nearest authorized service agent.

The appliance for household use for heating food and beverages using electromagnetic energy, for indoor use only.

GUARANTEE & SERVICE

If you need information or if you have a problem, please contact the Gorenje Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, go to your local Gorenje dealer or contact the Service department of Gorenje domestic appliances.

Eventual mismatches in colour shades between different appliances or components within a single design line may occur due to various factors, such as different angles under which the appliances are observed, different coloured backgrounds, materials, and room illumination.

For personal use only!

Additional recommendations for cooking with microwave and useful advices can be found on web side:

<http://www.gorenje.com>

**WISHES YOU A LOT OF PLEASURE WHILE USING
YOUR APPLIANCE**

gorenje

We reserve the right to any changes and errors in the instructions for use.

MO23ORAW
MO23ORAB

gorenje
BY
ora'ito

親愛的顧客

真誠感謝您購買本產品。相信不久您就會發現我們的產品值得信賴。為使產品使用更加方便，我們隨附了這份綜合指導手冊。

本指導手冊幫助您熟悉本產品。請務必在初次使用設備前仔細閱讀。

任何情況下，請確保收到的產品沒有任何毀壞。一旦發現產品有質量和運送損害，請聯繫銷售代表或產品出倉的區域倉庫。在收據或運送報告內附有電話。

我們希望這款家用電器能夠給你帶來愉悅的用戶體驗。



該款家電用來加熱食物和飲料，利用的是電磁能，僅供室內使用。

使用指南

請仔細閱讀說明書，並妥善保管。

本指導針對本產品使用者。

本指導描述炊具及使用方法。本指導也適用於其他不同類型的設備，因此也許部分功能描述並不符合本設備。

重要安全注意事項

- 警告：如產品在組合模式下運行，為避免被高溫燙傷，兒童必須在有正常成年人的看護下才能夠使用本機；(適用於有燒烤功能的型號)
- 警告：如爐門或密封條有損壞，在專業技術人員維修好之前請勿使用；
- 警告：由非專業人員擅自拆除及維修本機會導致危險；
- 警告：請勿將密封包裝的液體及其它食物放入微波爐內加熱，以免發生爆炸。
- 警告：未成年、身心不健全、及缺乏相關經驗者需要在正常成年人看護下才可使用本機。兒童不得擅自玩弄本機。
- 微波爐安裝位置必須有足夠通風，需離後牆部8cm，離兩邊牆身10cm及離頂部10cm。請勿將微波爐底腳拆下，及遮擋微波爐通風口。
- 請使用微波爐專用容器。
- 如加熱膠料或紙質包裝的食物，請於運作時進行觀察，避免包裝被燃燒。
- 如出現冒煙，請關閉電源或拔掉插頭，保持爐門關閉，以把火悶滅。
- 使用微波加熱飲品，會出現延遲沸騰情況，因此請小心將容器從微波爐內取出。
- 切勿將嬰兒用奶樽連同瓶蓋或奶嘴放入微波爐內加熱。加熱後需將食物搖勻以令熱力平均散開。給嬰兒餵食前，請先檢查食物溫度，以免嬰兒被燙傷。
- 請勿將生或煮熟帶殼的雞蛋放入微波爐內加熱，有可能會發生爆裂。
- 爐門、密封條及微波爐內部清洗，請使用溫和的肥皂水或清潔劑，以海綿或軟布清洗。
- 請定期清洗微波爐，清除爐面殘留的汙漬。
- 表面殘留的食物屑會導致產品損壞，影響使用壽命或導致危險。
- 如電線損壞，為確保安全，必須由專業技術人員來更換。

安全注意事項

以下安全注意事項適用於此系列所有產品：

1. 產品運作期間確保轉盤及相關元件裝入指定的位置。
2. 請勿將本機用作非食物烹調之外的用途，如烘乾衣物、紙等，亦不要用作消毒櫃。
3. 請勿空爐啟動。微波爐在沒有食物放入的情況下運作，會導致損壞。
4. 請勿用微波爐來儲藏紙類及食譜等。
5. 請勿將表層有薄膜或帶皮的食物放入微波爐內加熱，例如蛋黃、薯仔、雞肝等，請在食物表面先刺孔。
6. 請勿在本機外殼的開孔處插入任何物件。
7. 請勿隨意拆除產品部件如底腳、聯接頭、螺絲等。
8. 請勿直接將食物放在轉盤上烹調。應先將食物放在適當的容器內再放入微波爐內。

注意：不能放入微波爐加熱的容器

- 請勿使用金屬盤或其他有金屬手柄的容器。
 - 請勿使用任何有金屬邊的容器。
 - 請勿使用有金屬打結帶的塑膠袋。
 - 請勿使用含有三聚氰胺的碗碟，此類容器會吸收微波，會導致碗碟出現痕或變黑，及降低烹調速度。
 - 請勿使用含彩釉的餐具。上釉的材料不適合放入微波爐內使用。Corelle Livingware 閉口手柄的茶杯也不適合使用。
 - 請勿使用細瓶口或密封的油罐等容器，避免受熱後發生爆炸。
 - 請勿使用肉針或其他探熱針。
 - 微波爐內只能夠使用專用的探熱計。
9. 請選用符合廠家要求的微波爐用具。
 10. 請勿用微波爐來煎炸食物。
 11. 請注意，微波爐僅對食物本身作出加熱，而非容器。因此，在取出容器時，即使容器溫度不高，但內裡食物/液體還是會釋放蒸氣。
 12. 當加熱食品時，特別是嬰兒食品，應先行測試食物溫度。建議在加熱完成後，讓食物或飲料先擱置一段時間，攪拌食物讓熱力平均再取出。
 13. 食物如包含油脂和水的混合物，在微波爐停止運作後，需要擱置30-60秒再取出。讓此類混合物稍冷卻，避免將湯匙放入時會產生氣泡。
 14. 有些食物，例如布丁、果醬及免治肉等，它們的受熱速度比較快，因此需要注意烹調時間。當加熱高脂肪或糖份的食物時，請不要使用塑膠容器。
 15. 由於食物傳熱，容器的溫度也會隨之升高。特別是被塑膠包裹的容器蓋及手柄。建議在取出容器時使用隔熱手套或墊布。

16. 為避免微波爐內起火的危險：
 - a) 不要設定過長的烹調時間。如放入紙類、塑膠及其他易燃材料時，更需特別注意。
 - b) 將塑膠包裝的食物放入微波爐前，請將包裝上的金屬結帶解下。
 - c) 如包裝材料在微波爐內燃燒，請保持機門關閉，拔掉電源插頭或關閉保險絲或斷路器的開關。
17. 本家電僅供家庭使用或以下類似環境中，例如：
 - 商店、辦公室及其他工作環境中的員工廚房；
 - 家庭農場；
 - 酒店、汽車旅館的房間、其他住宅或出租房屋中；
 - 住宿加早餐酒店中；

控制台

^ — (1)

∨ — (2)

微波 — (3)





🕒 — (5)

📄 — (6)

▶|□ — (7)

1. 時間 +
2. 時間 -
3. 微波/解凍/燒烤/組合功能
4. 顯示幕
5. 時鐘 /計時器
6. 自動 菜單
7. 開始/重設

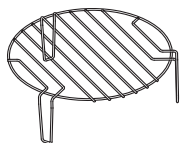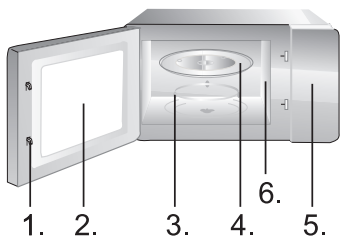

1. 爐門鎖閉系統
2. 機門玻璃窗
3. 通風口
4. 環形滾軸
5. 烤盤
6. 控制台
7. 燒烤架

1. 單鍵加熱

只需按一鍵，就能簡單的進行快速加熱，例如 加熱一杯水等。
例如：加熱牛奶

- a) 將1杯牛奶放在玻璃轉盤上，將爐門關上。
- b) 按»開始/重設«，微波以最大功率運作1分鐘。
- c) 加熱完成後，微波爐會發出5次聲響提示。

2. 微波加熱

此功能有兩個選項：

- a) 快速微波加熱 (最大功率)
例如：以最大功率加熱食物5分鐘
 1. 時間設定為 »5:00«
 2. 按 »開始/重設«
- b) 手動設定微波加熱程式
例如：以 70%功率加熱食物10分鐘
 1. 按 »微波« 將功率大小設定 為 »70%«
 2. 時間設定為 »10:00«
 3. 按»開始/重設«

本機設有 5個功率等級，最長微波烹調時間 為 60分鐘。

按«Micro« 鍵次數	微波功率	顯示
1	100%	P100
2	70%	P70
3	50%	P50
4	30%	P30
5	10%	P10

3. 自動按重量解凍

選擇食物重量，系統將自動調節功率等級及解凍時間。例如：解凍 0.5kg急凍肉。

- a) 按«微波« 設定為«0.1«。
- b) 按«時間 +« (1kg) 及«時間 -« (0.1kg)，輸入食物重量。
- c) 按«開始/重設«。急凍肉類重量不得超過2kg。

4. 燒烤

此功能有兩個選項，按 »燒烤«
進行選擇 (最長烹調時間為 60分鐘)：
選項 1: 85% 燒烤功率運作，顯示為 "G-1"
選項 2: 50% 燒烤功率運作，顯示為 "G-2"
例如：使用燒烤功能烹調 20分鐘

- a) 按 "燒烤" 直至 LED 顯示 "G-1"。
- b) 時間設定為 "20:00"。

c) 按“開始/重設”。

烹調時，食物不通過微波加熱。熱源來自爐內頂部的金屬加熱絲。烹調過程分為兩個階段，第一階段烹調結束後，本機將自動暫停運行，同時發出兩次聲響提示，以提示用戶打開爐門，將食物翻轉，之後將爐門關閉。按“開始/重設”繼續第二階段的烹調。如無需翻轉食物，本機將在暫停1分鐘後自動繼續運作。

5. 組合模式

此功能有兩個選項

選項 1: 組合模式(55%微波+45%燒烤)，顯示為 »C-1«。

選項 2: 組合模式(30%微波+70%燒烤)，顯示為 »C-2«。

例如：使用選項2烹調15分鐘

- 按“組合功能”直至LED顯示“C-2”。
- 時間設定為“15:00”。
- 按“開始/重設”。

6. 自動程式

用戶只需選擇食物類型及重量，微波爐將自動調節功率及時間。

例如：自動烹調0.4 kg的魚類

- 按«自動菜單»直至顯示»A-5«。
- 按«時間 +» (1kg) 及«時間 -» (0.1kg) 輸入食物重量。
- 按«開始/重設»。

菜單	重量 (g,..) / 單位
A-1 白飯	100 - 500g
A-2 蔬菜	100 - 600g
A-3 麵條	1 - 2
A-4 肉類	200 - 1000g
A-5 魚類	200 - 1000g
A-6 雞肉	200 - 1000g
A-7 飲料	2 - 10dl
A-8 爆米花	100g

7. 時鐘設定

微波爐有24小時數位時鐘顯示幕。

例如要將時鐘時間設定為 4:30pm：

- 按«時鐘/計時器»，螢幕開始閃爍，按«時間 +»或«時間 -»調節小時數。
- 再按«時鐘/計時器»，按«時間 +»或«時間 -»調節分鐘數。
- 按«時鐘/計時器»，儲存設定。
- 如需更改時間設定，重複以上步驟。

8. 計時器

讓微波爐在預設時間內啟動及完成烹調程式。

使用前請確定時鐘設定準確。例如：當前時間為16:30，希望微波爐在18:15啟動，以70%的功率加熱10分鐘：

- 按«時鐘/計時器»，按«時間 +»或«時間 -»將時鐘時間調節為“18:15”（參考時鐘設定內容）。
- 按«微波»，將功率調節為70%。
- 將微波爐運作時間設定為10分鐘。
- 按«開始/重設»

如未有設定功率及運作時間而直接按«開始/重設»，系統只會視之為鬧鐘設定。當18:15時，系統會發出5次警響提示，然後關閉。

9. 童鎖



此功能預防因疏忽而導致兒童操作微波爐發生危險。童鎖開啟時，相關標識會亮起，微波爐不能再進行其他操作。

按住開始/停止鍵3秒，即可鎖住控制面板。童鎖開啟時，所有按鍵失效。按住開始/停止鍵3秒，解開童鎖。

10. 開始/重設

- 產品運作期間按«開始/重設»，運作將被停止。
- 如在按«開始/重設»前設定了程式，按此鍵將取消原先的設定。

11. 節約能源

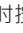同時按住  和  鍵。顯示屏將熄滅，且微波進入節能模式，能耗減少。

按任意鍵，或者开启或关闭炉门，均可以取消节能模式，且重新点亮显示屏。

1. 清潔前請先確認產品已關閉，插頭已拔掉。
2. 應保持微波爐內部清潔。用濕布清理爐壁的食物殘屑。不要使用研磨性的清潔劑。
3. 用濕布清洗產品表面。請注意，乾要讓水流入微波爐通風口，避免損壞內部元件。
4. 請勿讓控制台直接濕水，用乾淨濕布清潔。請勿在控制台上使用清潔劑、研磨性清潔劑及噴霧。
5. 如微波爐內部或外部凝結過多的水蒸氣，請用軟布抹乾。此情況通常發生在微波爐在潮濕的環境下運作，且無法顯示異常資訊。
6. 定期需要將烤盤取下清洗。用溫和肥皂水或放入洗碗機清洗。
7. 定期清洗環形滾軸及爐底可避免噪音過大。只需用溫和的清潔劑、水或玻璃清潔劑來清洗然後抹乾。環形滾軸需用溫和肥皂水清洗。烹調時所產生的蒸氣不會影響到爐底表面和環形滾軸導輪。環形滾軸拆下清洗完後，需將它裝回正確位置。
8. 要清除微波爐內的異味，只需在深的微波碗內放入一杯水和檸檬汁及少量檸檬皮，以微波加熱5分鐘，再用軟布輕輕抹乾微波爐。
9. 如需更換燈泡，請聯絡客戶服務部。

環境保護

本產品不能作為一般廢物處理，應將其交給回收電器和電子設備的回收網站進行處理。確保對本產品進行正確處理，有助於防止對環境造成潛在負面影響。

1. 將爐內所有的包裝材料拆除。
2. 拆除包裝後，檢查是否有損壞痕跡：
 - 爐門不平衡
 - 爐門有損壞
 - 爐門玻璃窗及顯示幕有凹痕或缺口。
 - 爐壁有凹痕。如對此有疑問，請勿使用本機。
3. 微波爐淨重14.5 kg，需放置在水準且穩固的平面上。
4. 產品安裝的位置需遠離高溫及蒸氣。
5. 請勿在爐頂上放置任何雜物。
6. 爐身應與兩側櫥櫃保持8cm以上的距離，並與後面牆身保持10cm以上的距離以確保有足夠散熱。
7. 請勿將轉盤轉動軸取下。
8. 兒童必須在正常成年人的看護下操作微波爐。
注意-產品必須配備接地裝置。
9. 將產品安裝在方便連接電源插頭的位置。
10. 微波爐需要1.3 KVA 的輸入電流，安裝時請諮詢技術人員的建議。

注意：本產品配備250V·10 Amp保險絲。

重要

請參考以下電線顏色代碼：

綠色及黃色：	地線
藍色：	水線
啡色：	火線

如電線的顏色和以上顏色標準相符，連接步驟如下：

- 綠色及黃色線需要連接至插頭上標有字母 E或標有綠色及黃色地線顏色代碼的埠。
- 藍色線必須連接至標有字母 N或黑色的端點。
- 啡色線必須連接至標有字母 L或紅色的端點。

產品規格

耗電量	220V~50Hz,1400W
輸出功率	900W
燒烤發熱線	1200W
運作頻率	2450MHz
外部尺寸	510mm(W) X 303mm(H) X 405mm(D)
內部尺寸.....	330mm(W) X 212mm(H) X 330mm(D)
容量	23L
重量	約14.5 kg
噪音級別	Lc < 58 dB(A)




本產品已根據歐盟有關廢舊電子設備（WEEE）回收指令（2012/19/EU）進行了鑒定。正確處理廢棄產品可以避免對環境和人類健康產生負面影響。

無線電幹擾

微波爐會對您的收音機、電視機及此類無線電接收設備產生干擾。如出現此類情況，可以通過以下方法來消除或減輕干擾。

- 清洗爐門及密封條表面。
- 儘量讓收音機、電視機等設備遠離微波爐。
- 在收音機和電視機上安裝適當的天線，確保信號接收良好。

微波爐安裝

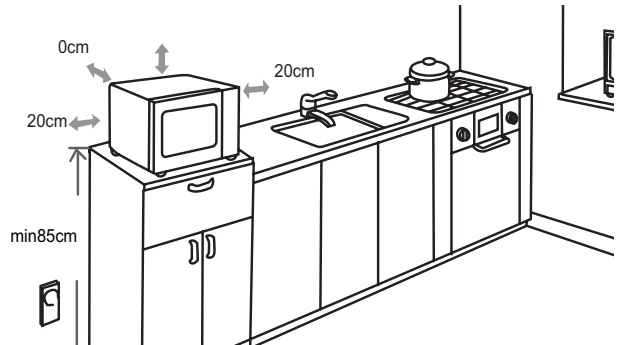

我們有權在不影響設備功能的情況下對使用細則做出修改。

故障處理

1. 微波爐不能運作·螢幕沒有顯示：
 - a) 檢查電源連接是否正常。如有問題·請將插頭拔下·等待10秒後再重新插入。
 - b) 檢查保險絲是否熔斷或發生跳閘。如排除以上情況·可換其他電器來檢測輸出電源是否正確。
2. 如微波不能順利啟動：
 - a) 檢查是否設置計時器。
 - b) 檢查爐門是否關妥·否則微波無法產生。

如根據以上方法未能解決問題·請聯絡客戶服務部。

本產品只供家庭使用。

保修服務

如您對產品有任何疑問請聯絡當地客服中心 或者廠家指定經銷商 (服務熱線詳見產品保修卡) 。

僅限個人使用!

其他微波及燒烤烹調相關資訊請登入此網址：
<http://www.gorenje.com>

希望我們的產品能夠給您帶來
長久舒心的享受

gorenje

本公司對說明書擁有解釋權和修改權。

www.gorenje.com